



Application Note: JN-AN-1216

ZigBee 3.0 IoT Control Bridge

The NXP ZigBee 3.0 IoT Control Bridge provides a means of controlling ZigBee devices via a serial link which is connected to a host controller. The IoT Control Bridge supports ZigBee Lighting & Occupancy (ZLO) devices, controlling the network by mostly client cluster commands, and runs on the NXP JN516x and JN517x wireless microcontrollers.

This guide provides information to allow users to connect to the Control Bridge using a Graphical User Interface (GUI), which simulates a host, to operate the ZigBee network. It also describes the serial protocol used to interface with the Control Bridge, as well as the payloads of all relevant commands and responses.

1 Application Note Overview

This Application Note is concerned with a ZigBee 3.0 Control Bridge device implemented as a serial device. This device would typically form the ZigBee side of an IoT Gateway. The Application Note shows how the ZigBee Control Bridge can be controlled by an application running on a PC. It also demonstrates the different commands that can be sent in the payload that the ZigBee Control Bridge requires. The demonstration described in this guide uses the hardware found in the JN516x-EK004 Evaluation Kit and JN517x-DK005 Development Kit. For information on how to use the ZigBee IoT Control Bridge with the components of these kits, please refer to the *JN516x-EK004 Evaluation Kit User Guide (JN-UG-3108)* and *JN517x-DK005 Development Kit User Guide (JN-UG-3121)*.

This guide is intended to show how to set up and use the Control Bridge in a simple demonstration network of ZigBee Lighting & Occupancy (ZLO) devices, in order to familiarise users with the functions available to a Gateway host. This is done by using the ZigBee Gateway Graphical User Interface (ZGWUI) to interact with the Control Bridge to manage the network and the devices. The ZGWUI is a C# application that acts as a PC host that communicates serially with the JN516x/7x-based Control Bridge. The firmware used in this Application Note is supplied as source code to allow customisation. Firmware for the ZigBee devices to be controlled can be built from the Application Note *ZigBee 3.0 Light Bulbs (JN-AN-1218)* and other NXP ZigBee 3.0 Application Notes.

2 Capabilities

This Application Note is designed for use with the following NXP hardware and software:

| Product Type | Part Number |
|--|------------------------------|
| Evaluation/Development Kit | JN516x-EK004 JN517x-DK005 |
| JN516x ZigBee 3.0 SDK (BeyondStudio only) | JN-SW-4170 |
| JN517x ZigBee 3.0 SDK (LPCXpresso only) | JN-SW-4270 |
| 'BeyondStudio for NXP' Toolchain | JN-SW-4141 |
| LCPXpresso Toolchain | 7.9.2 (Build 493) |

The ZigBee Gateway can be used to control ZigBee 3.0 network nodes based on the ZigBee Lighting & Occupancy (ZLO) devices. However, for backwards compatibility, it can also be used to control devices from the former ZigBee Light Link and Home Automation profiles.

The main purpose of this Application Note is to provide a JN516x/JN517x slave application that receives various commands to control nodes within a ZigBee network. This allows a master (normally a host) to bridge into a ZigBee network while servicing IPv6 devices or other protocols.

The ZGWUI is provided in this Application Note as a way demonstrating all the different features that the JN516x/7x Control Bridge supports. It is also provided as source code, so developers can reference the protocol data sent to the JN516x/7x Control Bridge to aid faster development.

3 What is Provided

The demonstration package comes with the following components, intended to be used with hardware components in the JN516x-EK004 or JN517x-DK005 kit:

- Documentation (this document)
- Application binaries and source code for the following:
 - ZigBee Control Bridge
 - ZigBee Gateway Graphical User Interface (ZGWUI)

Although in most cases the ZigBee Control Bridge can be used “as is”, developers may want to add extra functionality or even add application-specific behaviour.

To run the demonstration, application binaries are also required for the network nodes:

- Dimmable Light (**App_DimmableLight_JN5169_DR1175.bin**,
App_DimmableLight_JN5179_DR1175.bin)
- Extended Colour Light (**App_ExtendedColorLight_JN5169_DR1175.bin**,
App_ExtendedColorLight_JN5179_DR1175.bin)
- Colour Temperature Light (**App_ColorTemperatureLight_JN5169_DR1175.bin**,
App_ColorTemperatureLight_JN5179_DR1175.bin)

These binaries are provided in the Application Note *ZigBee 3.0 Light Bulbs (JN-AN-1218)* and must be loaded into boards of the JN516x-EK004 or JN517x-DK005 kit (see Section 4.2.3).

4 Running the Demonstration

4.1 Programming the JN516x/JN517x Device

The following table lists the supplied binary files and the components of the JN516x-EK004 or JN517x-DK005 kit on which they may be used.

| Application Binary | Expansion Board (+ Carrier Board) | | | Remote Control Unit | USB Dongle |
|---|--|-----|-----------------|---------------------------|---------------|
| | Generic | LCD | Lighting/Sensor | | |
| ZigbeeNodeControlBridge_JN5168_COORDINATOR_1000000.bin | ■ | | | | ■ |
| ZigbeeNodeControlBridge_JN5168_FULL_FUNC_DEVICE_1000000.bin | ■ | | | | ■ |
| ZigbeeNodeControlBridge_JN5169_FULL_FUNC_DEVICE_1000000.bin | ■ | | | | ■ |
| ZigbeeNodeControlBridge_JN5169_COORDINATOR_1000000.bin | ■ | | | | ■ |
| ZigbeeNodeControlBridge_JN5179_FULL_FUNC_DEVICE_1000000.bin | ■ | | | | ■ |
| ZigbeeNodeControlBridge_JN5179_COORDINATOR_1000000.bin | ■ | | | | ■ |

Each binary name provides details of the chip variant, supported device type and baud rate for the Control Bridge – for example:

- **ZigbeeNodeControlBridge_JN5169_COORDINATOR_1000000.bin** is the Control Bridge binary which supports only the Coordinator device type, is built for the JN5169 chip and supports a 1M baud rate.
- **ZigbeeNodeControlBridge_JN5168_FULL_FUNC_DEVICE_1000000.bin** is the Control Bridge binary which supports both Router and Coordinator device types, supports Touchlink commissioning, is built for the JN5168 chip and supports a 1M baud rate.


To run the demonstration, the ZigBee Control Bridge binary will need to be programmed into a valid hardware kit board or USB dongle.

- For JN516x devices, this can be done from the 'BeyondStudio for NXP' development platform. For instructions on using BeyondStudio to program an application into a JN516x device, please refer to the *BeyondStudio for NXP Installation and User Guide (JN-UG-3098)*.
- For JN517x devices, this can be done from the LPCXpresso development platform. For instructions on using the LPCXpresso to program an application into a JN517x device, please refer to the *JN517x LPCXpresso Installation and User Guide (JN-UG-3109)*.


By default, the firmware uses the JN516x/7x UART0 to communicate with the host. Debug can also be enabled on UART1, but this can only be used when a DR1174 (for JN516x) or OM15028 (for JN517x) Carrier Board fitted with a DR1199 Generic Expansion Board is deployed. Debug can be implemented by connecting a serial cable from the PC to the Generic Expansion Board and opening a terminal with baud rate 115200 on the PC. This cannot be done on a USB Dongle as there is no UART1 connection available.

4.2.1 Connecting to the Control Bridge


In order to connect to the Control Bridge and issue commands to communicate with ZigBee devices, a serial connection must be set up and opened. To do this, click on **Settings** towards the top-left of the interface.

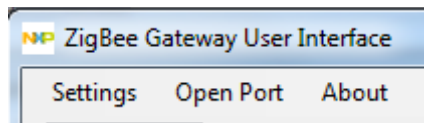

A pop-up window will appear showing all the available serial connections. Select the correct serial port, configure the baud rate to 1000000, leave all the other settings as default and click **OK**.

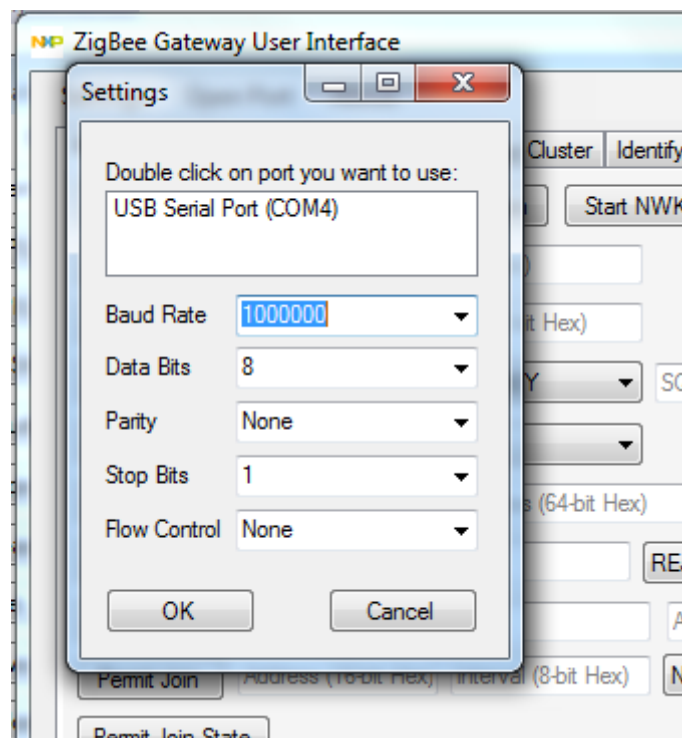

Now click the **Open Port** button in the ZGWUI. A serial connection to the Control Bridge will be opened with the status shown in the bottom-left corner of the interface.




4.2.2 Configuring and Starting a Network

Before initiating a network, some network configuration needs to be done - certain commands need to be run before the network is started, as described below. The description assumes that classical joining will be used to form the network.

In this case, the Control Bridge starts as a Coordinator and allows devices into the network via MAC association. Before you start the network, there are basic commands that can be optionally issued to create a customised network.


The two commands that can be sent are "Set Channel Mask" and "Set Extended PAN ID". The "Set Channel Mask" command informs the Control Bridge which channels the network

can start on. The Control Bridge will then choose the best channel available. The **Set CMSK** textbox can be used to specify either a hexadecimal value for a channel mask of possible channels or a decimal channel number if a fixed channel is to be used. The “Set Channel Mask” command can then be issued by clicking the **Set CMSK** button.

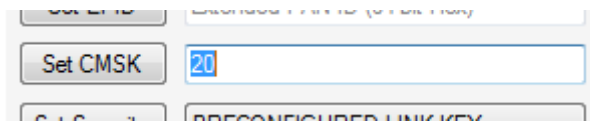


Indicates the network is to start on channel 20

The **Set EPID** textbox can be used to enter a pre-defined Extended PAN ID (EPID) as a 64-bit hexadecimal value. The “Set Extended PAN ID” command can then be issued by clicking the **Set EPID** button.



Once the network has been configured, it can be started. This is done by pressing the **Start NWK** button.



You will receive two messages back which will appear in the **Received Message View** pane in the bottom-right of the interface. The first will indicate a successful execution of the start network command and the second will indicate that the network has been formed, with information about the network parameters.



4.2.3 Setting up the Nodes

The demonstration requires the DR1174 Carrier Boards (supplied with the JN516x-EK004 Evaluation Kit) to be configured as lights which can be controlled. Each Carrier Board therefore needs to be fitted with a DR1175 Lighting/Sensor Expansion Board.

Set the jumpers for battery, USB or power supply operation according to how the Carrier boards will be powered during the demonstration. Refer to the *JN516x-EK004 Evaluation Kit User Guide (JN-UG-3108)* or *JN517x-DK005 Development Kit User Guide (JN-UG-3121)* for details of the jumper settings.

Plug the Lighting/Sensor Expansion Boards onto the Carrier Boards.

4.2.3.1 Programming the ZigBee Device Binaries

Depending on which type of device and ZigBee network configuration you are demonstrating, you will need to program each light board with the an application binary – one of:


- **App_DimmableLight_JN51xx_DR1175.bin** (Dimmable Light)
- **App_ExtendedColorLight_JN51xx_DR1175.bin** (Extended Colour Light)
- **App_ColorTemperatureLight_JN51xx_DR1175.bin** (Colour Temperature Light)

where xx the chip number, 69 or 79.

These binaries are supplied in the Application Note *ZigBee 3.0 Light Bulbs (JN-AN-1218)*. They must be programmed into the devices using a JN51xx Flash programming tool, such as the one provided within BeyondStudio for NXP and described in the *BeyondStudio for NXP Installation and User Guide (JN-UG-3098)* or the one provided in LPCXpresso and described in the *JN517x LPCXpresso Installation and User Guide (JN-UG-3109)*.


4.2.4 Joining Nodes to the Network

To successfully join a node to the network, a network must be started and 'permit join' must be enabled on the network node(s) that other devices will join. In the first (left) **Permit Join** textbox, enter the address of the node on which you wish to allow joining (normally 0x0000 for the Coordinator or 0xFFFFC for all Router/Coordinator nodes). In the second (right) **Permit Join** textbox, enter the length of time in seconds for which you require 'permit join' to be active. Both values must be entered in hexadecimal. Click the **Permit Join** button to enable 'permit join' on the specified node(s).



Broadcast to all Router/Coordinator devices to allow joining for 254 seconds.

When a device joins the network, it will send out a Device Announce message which is captured in the **Received Message View** pane.

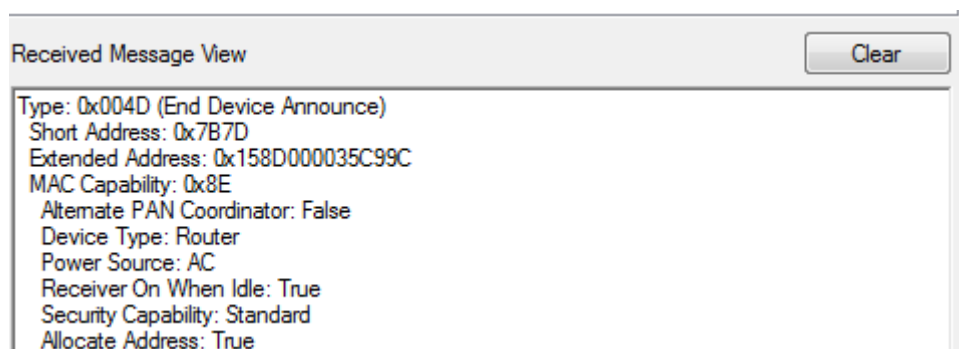

4.2.5 Controlling Devices

In this example, it is assumed that you have joined a Dimmable Light device to the network. A Dimmable Light device supports the On/Off and Level Control clusters that are used to modify the lighting characteristics of the bulb.

4.2.5.1 On/Off Cluster

Switching a light on or off is done using a command in the ZGWUI that has various attributes added.

Click on the **On/Off Cluster** tab along the top of the interface.

Select the address mode that you would like to use. Then in the three textboxes, enter the 16-bit network address of the node you want to control, the source endpoint number and the destination endpoint number (all in hexadecimal). Finally, select the type of “On/Off” command that you want to send.

The light will change its on/off state and a Default Response message will be received in the **Received Message View** pane. The Default Response confirms that a device received the “On/Off” command and processed the command. If the command was not sent via unicast, a Default Response will not be received.

4.2.5.2 Level Control Cluster

The Level Control cluster allows a bulb's dimmable light level to be set to a specific value. This value can be between 0 and 254 (inclusive), and can be set on the **Level Cluster** tab.

There are a number of attributes that can be passed to the Control Bridge as part of the Level Control cluster's "Move To Level" command:

- Addressing mode
- Hexadecimal destination address
- Source endpoint
- Destination endpoint
- With/without On/Off (indicates whether to modify On/Off state with Level Control)
- Hexadecimal level value
- Hexadecimal transition time (in tenths of a second)

These attributes appear (in the above order) on the **MoveToLevel** line in the interface:

The command is sent by clicking the **MoveToLevel** button. After sending this command with the above attribute values, the destination light will dim to the lowest level with a 1-second transition. A Default Response will be received in the **Received Message View** pane to indicate that the command was processed.

4.2.6 Managing Groups

In the ZGWUI, there are several commands available to manage groups and the devices that are members of these groups. All group commands are listed in the **Group Cluster** tab.

| Management | General | Basic Cluster | Group Cluster | Identify Cluster | Level Cluster | On/Off Cluster | Scenes Cluster |
|--------------|----------------------|--------------------|--------------------|-----------------------|---------------|----------------|----------------|
| Add Group | Address (16-bit Hex) | Src EP (8-bit Hex) | Dst EP (8-bit Hex) | Group ID (16-bit Hex) | | | |
| View Group | Address (16-bit Hex) | Src EP (8-bit Hex) | Dst EP (8-bit Hex) | Group ID (16-bit Hex) | | | |
| Get Group | Address (16-bit Hex) | Src EP (8-bit Hex) | Dst EP (8-bit Hex) | Group Count | | | |
| Remove Grp | Address (16-bit Hex) | Src EP (8-bit Hex) | Dst EP (8-bit Hex) | Group ID (16-bit Hex) | | | |
| Remove All | Address (16-bit Hex) | Src EP (8-bit Hex) | Dst EP (8-bit Hex) | | | | |
| Add If Ident | Address (16-bit Hex) | Src EP (8-bit Hex) | Dst EP (8-bit Hex) | Group ID (16-bit Hex) | | | |

4.2.6.1 Add Group

You can add a device to a group by sending an “Add Group” command to the device, in order to add the relevant group ID into the device’s Group Address table. This is done in the **Add Group** line of the interface by entering the network address of the device, source endpoint number, destination endpoint number and user-defined Group ID, and then clicking the **Add Group** button

| Management | General | Basic Cluster | Group Cluster | Identify Cluster | Level Cluster | On/Off Cluster | Scenes Cluster |
|------------|---------|---------------|---------------|------------------|---------------|----------------|----------------|
| Add Group | 706A | 1 | 1 | BEEF | | | |

An Add Group Response is then displayed in the **Received Message View** pane with the Group ID and the status of the command.

Received Message View
Clear

```

Type: 0x8000 (Status)
Length: 4
Status: 0x00 (Success)
SQN: 0x00
Message:
Type: 0x8060 (Add Group Response)
SQN: 0x00
EndPoint: 0x01
Cluster ID: 0x0004 (General: Groups)
Status: 0x00
Group: 0xBEEF

```

To verify that this group has been added, try sending an “On/Off” command with the group address you have just added. This will toggle the on/off state of the light. Note that since this is a groupcast, a Default Response will not be received.

| Management | General | Basic Cluster | Group Cluster | Identify Cluster | Level Cluster | On/Off Cluster | Scenes Cluster | Color Cluster |
|------------|------------|---------------|---------------|------------------|---------------|----------------|----------------|---------------|
| OnOff | Group Addr | BEEF | 1 | 1 | Toggle | | | |

4.2.6.2 View Group

You can find out whether a device is a member of a specific group by sending a “View Group” command to the device. This is done in the **View Group** line of the interface by entering the network address of the device, source endpoint number, destination endpoint number and Group ID of the relevant group, and then clicking the **View Group** button.

| | | | | |
|------------|------|---|---|------|
| View Group | 706A | 1 | 1 | BEEF |
|------------|------|---|---|------|

If the device is a member of that group, you will receive a View Group Response with a status of “Success” (0x00).

```

Received Message View
Type: 0x8000 (Status)
Length: 4
Status: 0x00 (Success)
SQN: 0x02
Message:
Type: 0x8061 (View Group Response)
SQN: 0x02
EndPoint: 0x01
Cluster ID: 0x0004 (General: Groups)
Status: 0x00
Group: 0xBEEF
  
```

If the device is not a member of that group, you will receive a View Group Response with a status of “Not Found” (0x8B).

```


Received Message View
Type: 0x8000 (Status)
Length: 4
Status: 0x00 (Success)
SQN: 0x04
Message:
Type: 0x8061 (View Group Response)
SQN: 0x04
EndPoint: 0x01
Cluster ID: 0x0004 (General: Groups)
Status: 0x8B
Group: 0xAAAA
  
```

4.2.6.3 Get Group Membership


You can find out which groups a specific device is a member of by sending a “Get Group Membership” command to the device. This is done in the **Get Group** line of the interface by entering the network address of the device, source endpoint number, destination endpoint number and group count (number of groups you want to look for), and then clicking the **Get Group** button.

| | | | | |
|--------------|----------------------|--------------------|---------------------|-----------------------|
| View Group | Address (16-bit Hex) | Src EP (8-bit Hex) | Dest EP (8-bit Hex) | Group ID (16-bit Hex) |
| Get Group | 42C3 | 1 | 1 | 0 |
| Remove Group | Address (16-bit Hex) | Src EP (8-bit Hex) | Dest EP (8-bit Hex) | Group ID (16-bit Hex) |

If the device is a member of any groups, it will respond with the number of groups and the group addresses of the groups to which it belongs.

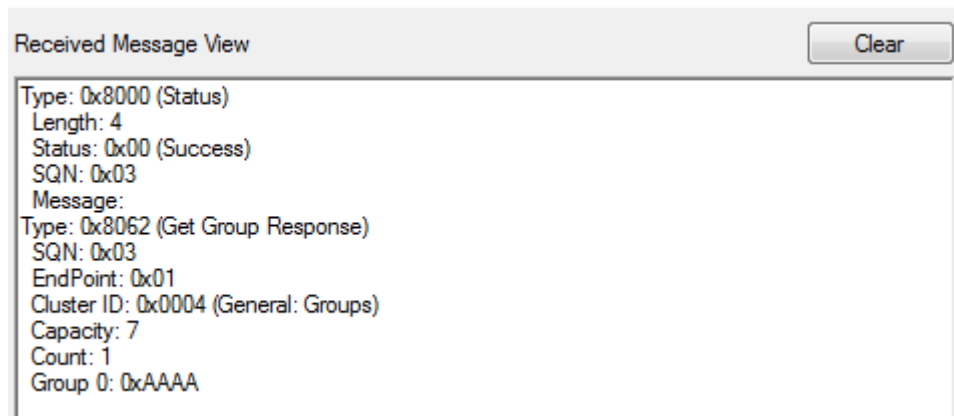

If the device is not a member of any groups, it will respond with an empty group list with a count of 0.

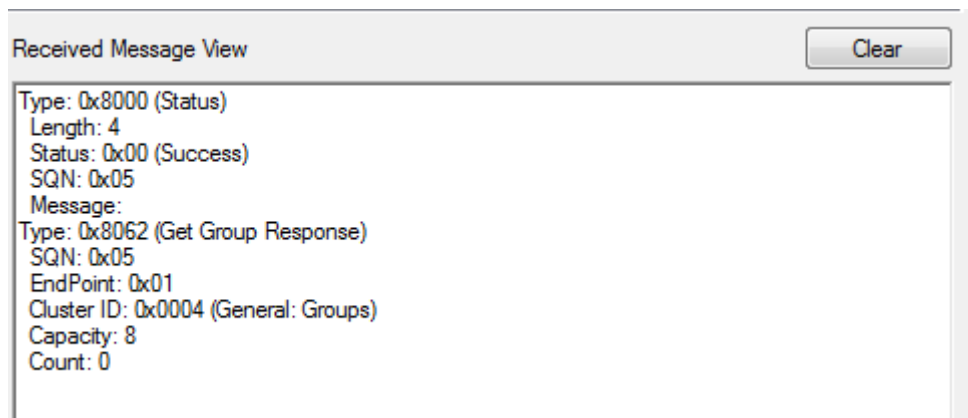


4.2.6.4 Remove Group


You can remove a group from a device's Group Address table by sending a "Remove Group" command to the device. This is done in the **Remove Grp** line of the interface by entering the network address of the device, source endpoint number, destination endpoint number and the relevant Group ID, and then clicking the **Remove Grp** button.

| | | | | |
|------------|------|---|---|------|
| Remove Grp | 42C3 | 1 | 1 | AAAA |
|------------|------|---|---|------|

If the device is a member of the group that you are trying to remove then it will respond with a status of “Success” (0x00).

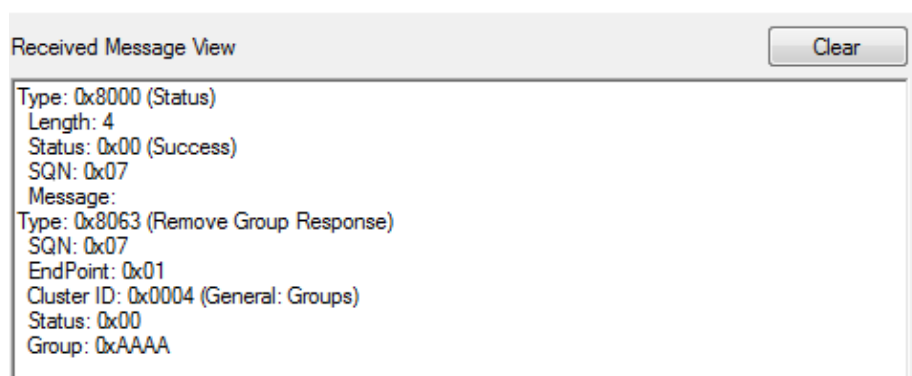

If the group does not exist on the device, it will respond with a status of “Not Found” (0x8B).

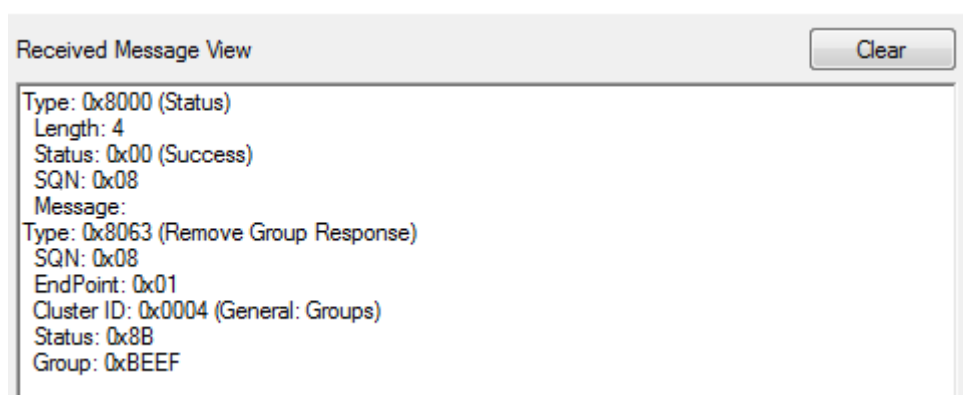


4.2.6.5 Remove All Groups

You can remove a device from all groups by sending the “Remove All Groups” command to the device. This is done in the **Remove All** line of the interface by entering the network address of the device, source endpoint number and destination endpoint number, and then clicking the **Remove All** button.



Irrespective of whether the device is associated with any groups, it will always respond with a status of “Success” (0x00).

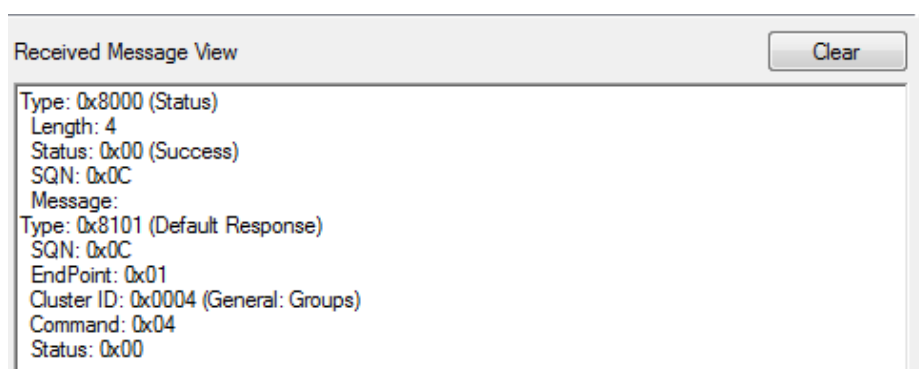

4.2.6.6 Add Group If Identifying

You can attempt to add a device to a group if the device has been put into Identify mode by sending the “Add Group If Identifying” command to the device. This is done in the **Add If Ident** line of the interface by entering the network address of the device, source endpoint number, destination endpoint number and the Group ID to be allocated, and then clicking the **Add If Ident** button.

This command does not send a response back to the host, but you can perform a send “Get Group Membership” command to verify that device is a member of the group.

4.2.7 Managing Scenes

In the ZGWUI, there are several commands available to manage scenes and the devices that participate in these scenes. All scene commands are listed in the **Scenes Cluster** tab. To be able to use a scene command, the target device must be a member of a group with an associated scene.

4.2.7.1 Add Scene

The “Add Scene” command allows a scene with specified Scene ID (associated with a particular Group ID) to be added on a remote device. This feature is included in the example code for the ZGWUI application but is not fully implemented in the interface. You can add a scene using the “Store Scene” command (see Section 4.2.7.2).

4.2.7.2 Store Scene


The “Store Scene” command instructs a device to save its current state in a scene (new or existing). This is done in the **Store Scene** line of the interface by entering the addressing mode, address of the device, source endpoint number, destination endpoint number, Group ID and Scene ID, and then clicking the **Store Scene** button.

This results in the following “Store Scene Response” command which is displayed in the **Received Message View** pane.

The above output indicates that the device state has been successfully stored in the scene with Scene ID 0x01 associated with the group with Group ID 0xAAAA

4.2.7.3 Recall Scene

The “Recall Scene” command instructs a device to restore a previously saved scene in the device - for a light bulb, this could be restoring an on/off or level state. This is done in the **Recall Scn** line of the interface by entering the addressing mode, address of the device, source endpoint number, destination endpoint number, Group ID and Scene ID, and then clicking the **Recall Scn** button.

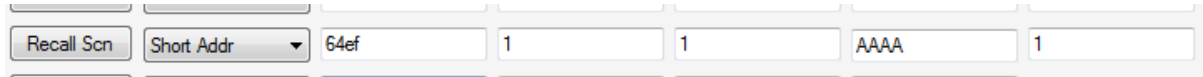

When the command is sent, a response will appear in the **Received Message View** pane indicating whether the command has been successful.




4.2.7.4 View Scene

You can view the details of a scene (e.g. on/off state, level) on a device by sending a “View Scene” command to the device. This is done in the **View Scene** line of the interface by entering the addressing mode, address of the device, source endpoint number, destination endpoint number, Group ID and Scene ID, and then clicking the **View Scene** button.



After sending a successful “View Scene” command, a response containing vital information like Transition time, Scene Name Length, Scene Name and Scene Data will be displayed in the **Received Message View** pane.

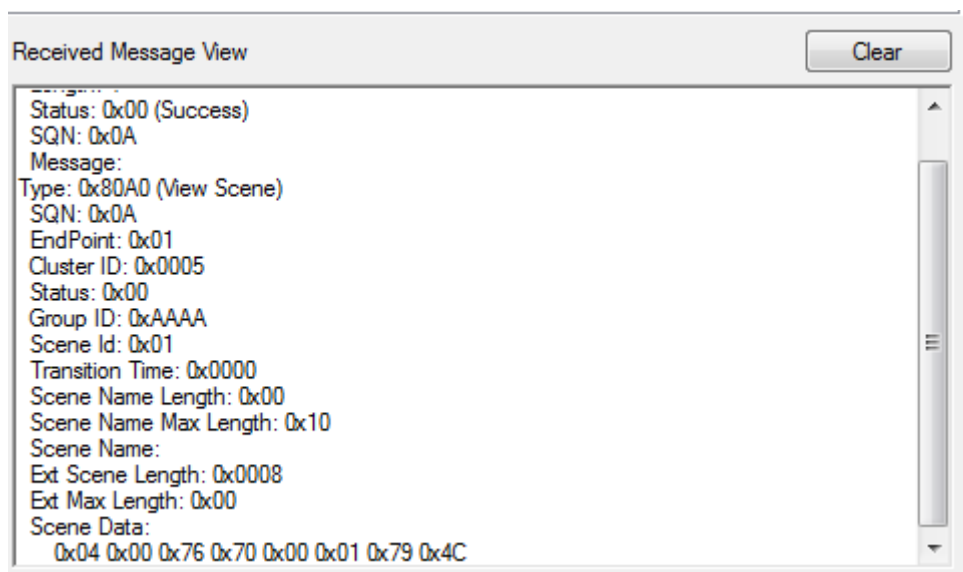

4.2.7.5 Get Scene Membership


You can find out which scenes associated with a particular group are available on a device by sending a “Get Scene Membership” command to the device. This is done in the **Get Memb** line of the interface by entering the addressing mode, address of the device, source endpoint number, destination endpoint number and Group ID, and then clicking the **Get Memb** button.

After sending a successful “Get Scene Membership” command, a response listing the number of scenes and the Scene IDs available will be displayed in the **Received Message View** pane.

4.2.7.6 Remove All Scenes


You can remove all scenes associated with a particular group on a device by sending a “Remove all Scenes” command to the device. This is done in the **Remove All** line of the interface by entering the addressing mode, address of the device, source endpoint number, destination endpoint number and Group ID, and then clicking the **Remove All** button.

After sending a successful “Remove All Scenes” command, a response indicating whether the removal was successful will be displayed in the **Received Message View** pane.

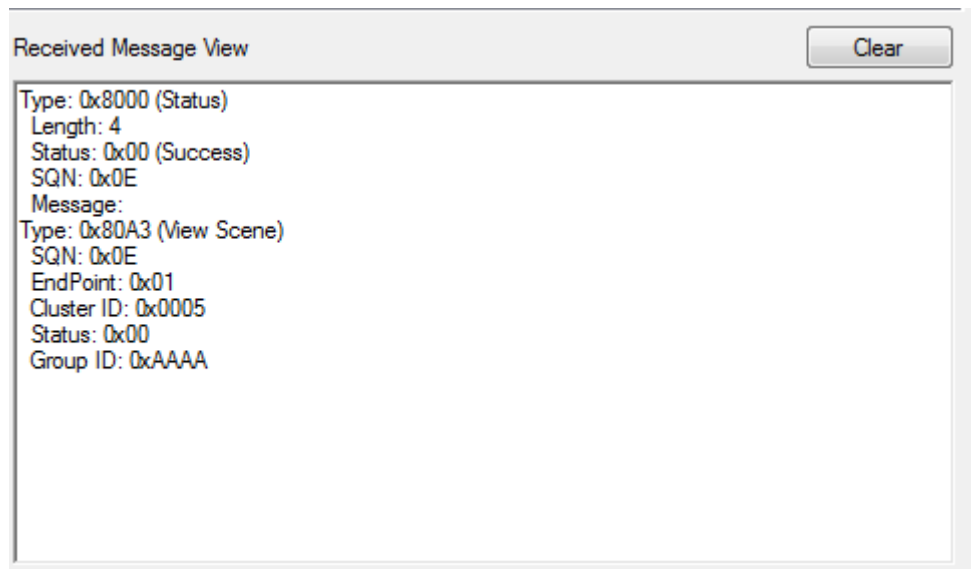


4.2.7.7 Remove Scene

You can remove a specific scene associated with a particular group on a device by sending a “Remove Scene” command to the device. This is done in the **Remove** line of the interface by entering the addressing mode, address of the device, source endpoint number, destination endpoint number, Group ID and Scene ID, and then clicking the **Remove** button.



After sending a successful “Remove Scene” command, a response indicating whether the removal was successful will be displayed in the **Received Message View** pane.

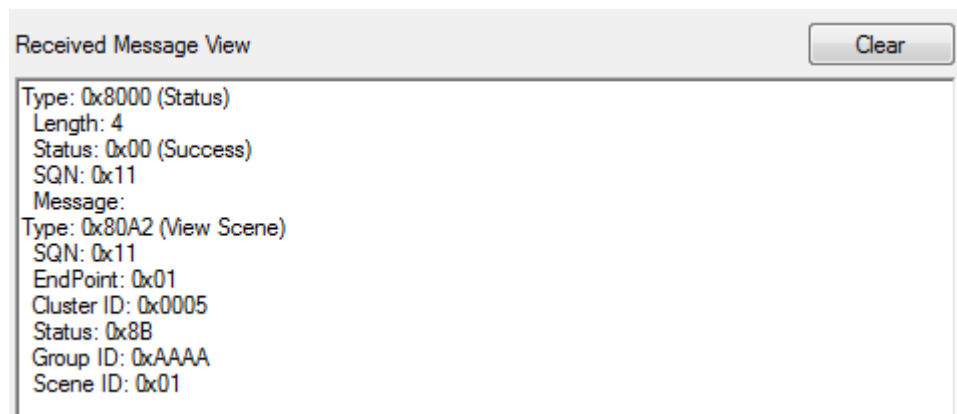

4.2.8 Running Over-The-Air (OTA) Upgrade

The ZGWUI provides an interface to perform an Over-The-Air (OTA) upgrade. This involves loading an application binary that will be served out ‘over the air’ to devices in the network. The following sections demonstrate how OTA upgrade is executed on the ZGWUI. This demonstration assumes that you have devices in the network which have the OTA Upgrade client cluster implemented. This document will describe the process of OTA upgrade on a Dimmable Light device. For this example, the following binary is initially used in the Dimmable Light:

App_DimmableLight_JN5169_DR1175.bin

This application is supplied in the Application Note *ZigBee 3.0 Light Bulbs (JN-AN-1218)* and must be loaded into a network node (see Section 4.2.3).

4.2.8.1 Loading the Upgrade Binary


To perform an OTA upgrade, the relevant upgrade binary file needs to be loaded into the ZGWUI application. Click on the **OTA Cluster** tab, which is displayed as follows:

The screenshot shows the ZGWUI interface with the 'OTA Cluster' tab selected. The interface includes a 'Load Image' button, a 'Manu Code' field, an 'Image Type' dropdown, a 'File Version' field, and a 'Size' field. Below these are fields for 'Image Notify', 'Bound Addr', 'Address (16-bit Hex)', 'Src EP (8-bit Hex)', 'Dst EP (8-bit Hex)', a 'JITTER' dropdown, 'Version (32-bit Hex)', 'Image Type (16-bit Hex)', 'Manu ID (16-bit Hex)', and 'Query Jitter (8-bit Hex)'. At the bottom, there are fields for 'Download Status', 'Progress' (with a progress bar), and 'File Offset'.


Click the **Load Image** button to bring up the file explorer window. Navigate to the folder which contains the OTA upgrade binary file that is to be used to upgrade the remote device and select the file – this is a **.ota** file, in this case:

DimmableLight_JN5169_DR1175_V2.ota


This file is supplied in the Application Note *ZigBee 3.0 Light Bulbs (JN-AN-1218)*, which must be present on your PC.

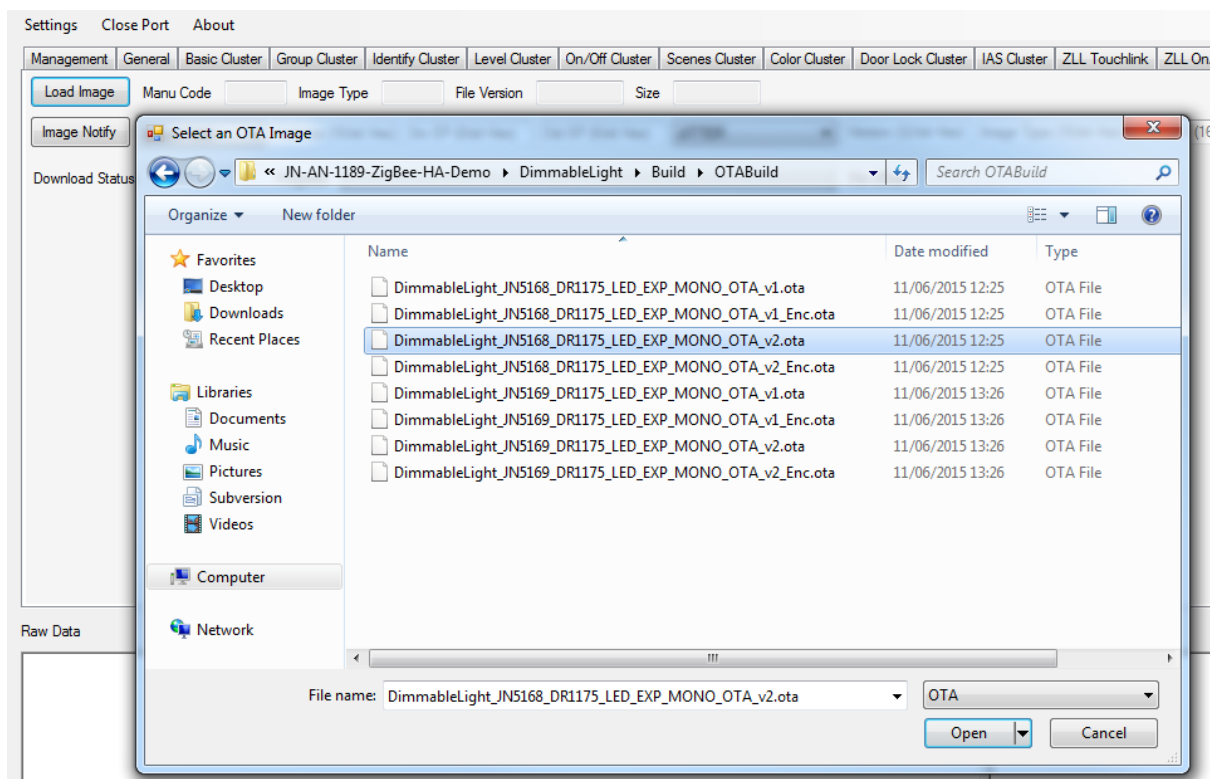

After loading the binary file, the ZGWUI will populate the Load Image textboxes with some useful data, including manufacturer code, image type, file version and binary size.

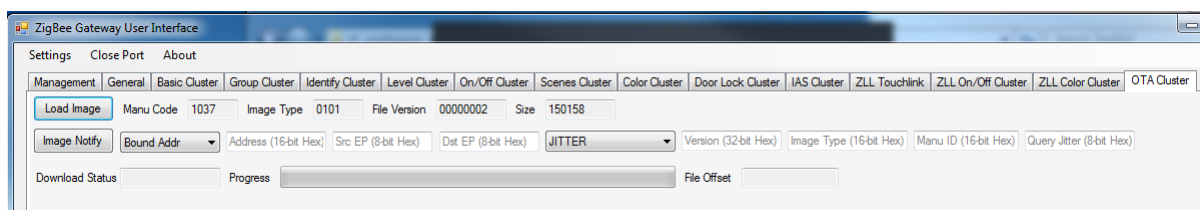

The ZGWUI also sends a serial command to the Control Bridge to inform the OTA Upgrade cluster of the loaded binary. The OTA header information is sent, which is loaded into the OTA Upgrade server. This means that when a remote device sends an image request to the server, the Control Bridge will be able to reply indicating that there is an image available.

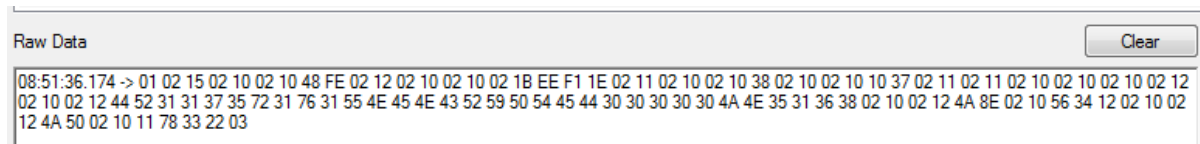

4.2.8.2 Image Notify

The “Image Notify” command is used to inform all relevant devices in the network that an OTA upgrade image is available (only devices to which the image is applicable are notified). This command contains the following parameters:

- Addressing mode
- Destination address
- Source endpoint
- Destination endpoint
- Image notify payload type
- Version
- Image type
- Manufacturer ID
- Query jitter

For descriptions of the “image notify payload type” and “query jitter” parameters, please refer to the description of the `tsOTA_ImageNotifyCommand` structure in the *ZigBee Cluster Library User Guide (JN-UG-3115)*.

The version, image type and manufacturer ID are visible in the **Load Image** textboxes, which can be seen below along with the line for the **Image Notify** command.

The screenshot shows the 'Image Notify' command configuration in the ZigBee 3.0 IoT Control Bridge. The 'Load Image' section displays: Manu Code 1037, Image Type 0101, File Version 00000002, and Size 150158. The 'Image Notify' section shows: Addressing Mode Broadcast, Destination Address FFFC, Source Endpoint 1, Destination Endpoint 1, Image Notify Payload Type JITTER, Version 00000002, Image Type 0101, Manufacturer ID 1037, and Query Jitter 64.

The above command notifies all relevant devices in the network and instructs all of them to upgrade straight away.

4.2.8.3 Device Updating

When a device has determined that the OTA upgrade binary on the host is relevant to itself (regardless of whether it was informed via an Image Notify command or as the result of an update request), the device will start upgrading.

The progress bar in the ZGWUI, shown below, indicates the current status of the upgrading device. The File Offset value is the number of bytes the server has sent to the device so far.


The screenshot shows the device updating progress bar in the ZigBee 3.0 IoT Control Bridge. The 'Download Status' is 'In Progress'. The 'Progress' bar is partially filled with green. The 'File Offset' is 16560.

Note that there is only one progress bar and if you have multiple devices upgrading, the bar will appear slightly random, as it will reflect whichever device is requesting a block of data.

When a device has finished upgrading, the download status will change to “Complete” and the progress bar will be full.

The screenshot shows the device updating progress bar in the ZigBee 3.0 IoT Control Bridge. The 'Download Status' is 'Complete'. The 'Progress' bar is fully filled with green. The 'File Offset' is 150144.

Upon completing an OTA upgrade, an End Request is sent to the host (containing the OTA header information the device received from the OTA server) in order to indicate that the device is going to reset.

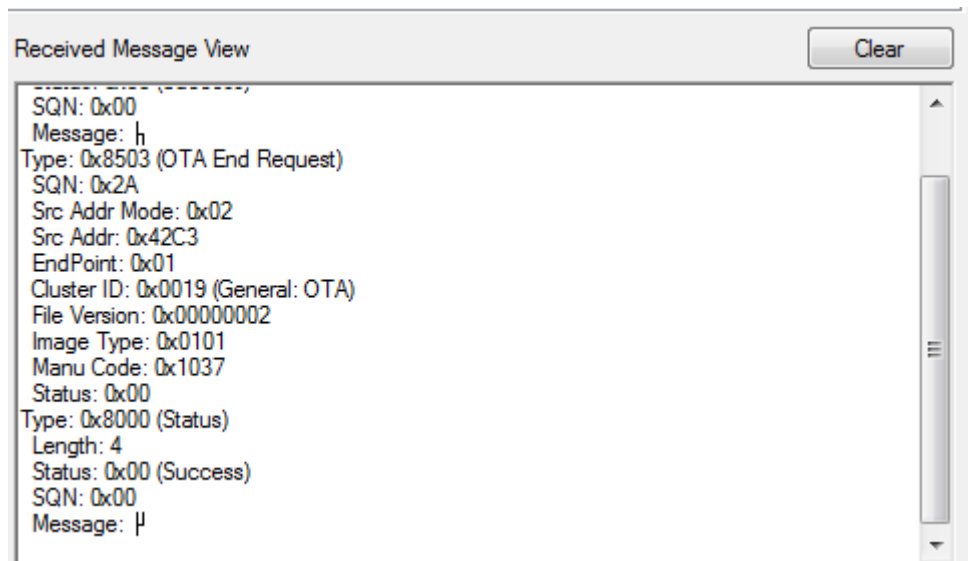

5 ZGWUI Source

The ZGWUI is provided as both executable and source code. It is provided as source code to give the developer information on which data is sent to the Control Bridge and how it is sent. This should speed up application porting and reduce mistakes made during application development. Although it provides most of the functionality supported by the Control Bridge, the ZGWUI does not support all features. Custom features that are added to the Control Bridge by the developer will also need to be added to the ZGWUI for testing purposes.

The ZGWUI application is built using the Visual Studio 2012 IDE which is based on C# code.

Appendix A: Serial Protocol

A.1. Physical Characteristics

The serial link between the ZGWUI (ZigBee Gateway User Interface) and wireless microcontroller runs at 1Mbaud when the JN516x/7x is contained in a USB dongle. The link settings are 8 data bits with no parity. No flow control (hardware or software) is used.

A.2. Message Characteristics

The protocol reserves byte values less than 0x10 for use as special characters (Start and End characters, for example). So to allow data which contains these reserved values to be sent, a procedure known as “byte stuffing” is used. This consists of identifying a byte to be sent that falls into the reserved character range, sending an Escape character (0x02) first, followed by the data byte XOR'd with 0x10.

For example, if a non-special character with the value of 0x05 is to be sent:

- Send the Escape byte (0x02)
- XOR the byte to be sent with 0x10 (0x05 xor 0x10 = 0x15)
- Send the modified byte

The messages consist of the following:

- Start character (special character)
- Message type (byte stuffed)
- Message length (byte stuffed)
- Checksum (byte stuffed)
- Message data (byte stuffed)
- End character (special character)

| | | | | | | | | | | | | |
|-------|----------|---|--------|---|--------|------|---|--|--|-----|-----|------|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | | | n+6 | n+7 | n+8 |
| 0x01 | | | n | | | | | | | | | 0x03 |
| Start | Msg Type | | Length | | Chksum | Data | | | | | | Stop |

Figure 1: Layout of message before byte stuffing

A.2.1. Start Character

The Start character is a single-byte special character with the value 0x01 and is sent as the first byte of any message to allow the receiving end to synchronise. Since this is considered a special character, it will be sent without modification.

A.2.2. Message Type

The message type is a 16-bit value identifying the nature of the data contained in the message payload. Values implemented are defined in the message table.

A.2.3. Message Length

The message length is a 16-bit value equal to the number of bytes in the payload section of the message, sent most significant byte first.

A.2.4. Checksum

The checksum is an 8 bit value calculated by XORing the following (starting with a checksum of 0x00):

- Message type most-significant-byte
- Message type least-significant-byte
- Message length most-significant-byte
- Message length least-significant-byte
- Data bytes

The checksum is calculated before byte stuffing the message.

A.2.5. Message Data

The message data is a number of bytes equal to the value sent as the message length field. The number of bytes transmitted via the UART may be higher due to presence of escape bytes sent to identify values that fall in the reserved range. All multi-byte binary data is sent in network byte order (big-endian).

A.2.6. End Character

The end character is a single byte special character with the value 0x03 and is sent as the last byte of any message to allow the receiving end to synchronise. Since this is considered a special character, it will be sent without modification.

A.2.7. Sequence

All commands generate a synchronous response code followed by any asynchronous responses as they become available. There is no sequence number associated with each command/response – the user must ensure that commands are issued sequentially.

Expected command response sequence:

| Direction | Message |
|--------------|---|
| Host -> Node | Command e.g. Get Version |
| Node -> Host | Status e.g. OK or Error, Not implemented |
| Node -> Host | Optional data messages as requested by command, e.g. Version List |

A.3. Data Types

The following data types are used in messages between the host and slave devices. All message definitions use 32-bit integer types, unless otherwise specified.

| Name | Type |
|-----------|--|
| uint8_t | Unsigned 8 bit integer (one byte) |
| uint16_t | Unsigned 16 bit integer (two bytes) |
| uint32_t | Unsigned 32 bit integer (four bytes) |
| uint64_t | Unsigned 64 bit integer (eight bytes) |
| uint128_t | Unsigned 128 bit integer (sixteen bytes) |
| string | Buffer of characters (Variable Length, NULL Terminated) |
| data | Buffer of bytes (Variable length, calculated using message length) |

A.4. Response Codes

The node acknowledges each command with an “ACK” message. The message is defined in the message table.

Appendix B: Serial Command Set

B.1. Common Commands

In the following tables, the term Node refers to the Control Bridge

B.1.1. ZigBee Stack and Node Management Commands

| Message Direction | Message Description | Message Format | Expected Response |
|-------------------|--|--|--|
| Node->Host | Status Msg Type = 0x8000 | <status:uint8_t> <sequence number: uint8_t> <Packet Type: uint16_t> <Optional additional error information: string> Status: 0 = Success 1 = Incorrect parameters 2 = Unhandled command 3 = Command failed 4 = Busy (Node is carrying out a lengthy operation and is currently unable to handle the incoming command) 5 = Stack already started (no new configuration accepted) 128 – 244 = Failed (ZigBee event codes) Packet Type: The value of the initiating command request. | All status messages will have a sequence number sent back. Default of 0 for messages which are not transmitted over the air. |
| Node->Host | Log message Msg Type = 0x8001 | <log level: uint8_t> <log message : string> Log Level : Use the Linux / Unix log levels 0 = Emergency 1 = Alert 2 = Critical 3 = Error 4 = Warning 5 = Notice 6 = Information 7 = Debug | |
| Node->Host | Data Indication Msg Type = 0x8002 | <status: uint8_t> <Profile ID: uint16_t> <cluster ID: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <source address mode: uint8_t> <source address: uint16_t or uint64_t> <destination address mode: uint8_t> <destination address: uint16_t or uint64_t> <payload size : uint8_t> <payload : data each element is uint8_t> | |
| Node->Host | Node Cluster List – Sent by gateway node after reset Msg Type = 0x8003 | <source endpoint: uint8_t t> <profile ID: uint16_t> <cluster list: data each entry is uint16_t> | |

| | | | |
|------------|---|---|---|
| Node->Host | Node Cluster Attribute List – Sent by Gateway node after reset Msg Type = 0x8004 | <source endpoint: uint8_t> <profile ID: uint16_t> <cluster ID: uint16_t> <attribute list: data each entry is uint16_t> | |
| Node->Host | Node Command ID List – sent by Gateway node after reset Msg Type = 0x8005 | <source endpoint: uint8_t> <profile ID: uint16_t> <cluster ID: uint16_t> <command ID list: data each entry is uint8_t> | |
| Host->Node | Get Version Msg Type = 0x0010 | No payload | Status Version List |
| Node->Host | Version List Msg Type = 0x8010 | <Major version number: uint16_t> <Installer version number: uint16_t> | |
| Host->Node | Set Extended PANID Msg Type = 0x0020 | <64-bit Extended PAN ID: uint64_t> | Status |
| Host->Node | Set Channel Mask Msg Type = 0x0021 | <channel mask: uint32_t> | Status |
| Host->Node | Set Security State & Key Msg Type = 0x0022 | <key type: uint8_t> <key: data> | Status |
| Host->Node | Set Device Type Msg Type = 0x0023 | <device type: uint8_t> Device Types: 0 = Coordinator 1 = Router 2 = Legacy Router | Status |
| Host->Node | Start Network scan Msg Type = 0x0025 | No payload | Status Network Joined / Formed |
| Host->Node | Start Network Message Type = 0x0024 | No payload | Status Network Joined / Formed |
| Node->Host | Network Joined / Formed Msg Type = 0x8024 | <status: uint8_t> <short address: uint16_t> <extended address: uint64_t> <channel: uint8_t> Status: 0 = Joined existing network 1 = Formed new network 128 – 244 = Failed (ZigBee event codes) | |
| Host->Node | ZLO/ZLL “Factory New” Reset Msg Type=0x0013 | No payload Resets (“Factory New”) the Control Bridge but persists the frame counters. | Status, followed by chip reset |
| Host->Node | “Permit join” status on the target Msg Type = 0x0014 | No payload | Status, followed by “Permit join” status response |
| Node->Host | “Permit join” status response Msg Type=0x8014 | <Status: bool_t> 0 - Off 1 - On | |
| Host->Node | Reset Msg Type = 0x0011 | No payload | Status, followed by chip reset |
| Node->Host | Non “Factory new” Restart Msg Type=0x8006 | Status – 0 - STARTUP 2 - NFN_START 6 - RUNNING The node is provisioned from previous restart. | |

| | | | |
|------------|---|---|------------------------------------|
| Node->Host | “Factory New” Restart Msg Type=0x8007 | Status – 0 - STARTUP 2 - NFN_START 6 - RUNNING The node is not yet provisioned. | |
| Host->Node | Erase Persistent Data Msg Type = 0x0012 | No payload | Status |
| Host->Node | Bind Msg Type = 0x0030 | <target extended address: uint64_t> <target endpoint: uint8_t> <cluster ID: uint16_t> <destination address mode: uint8_t> <destination address:uint16_t or uint64_t> <destination endpoint (value ignored for group address): uint8_t> | Status Bind response |
| Node->Host | Bind response Msg Type = 0x8030 | <Sequence number: uint8_t> <status: uint8_t> | |
| Host->Node | Unbind Msg Type = 0x0031 | <target extended address: uint64_t> <target endpoint: uint8_t> <cluster ID: uint16_t> <destination address mode: uint8_t> <destination address: uint16_t or uint64_t> <destination endpoint(value ignored for group address): uint8_t> | Status Unbind response |
| Node->Host | Unbind response Msg Type = 0x8031 | <Sequence number: uint8_t> <status: uint8_t> | |
| Node->Host | Device Announce Msg Type = 0x004D | < short address: uint16_t> < IEEE address: uint64_t> < MAC capability: uint8_t> MAC capability Bit 0 - Alternate PAN Coordinator Bit 1 - Device Type Bit 2 - Power source Bit 3 - Receiver On when Idle Bit 4,5 - Reserved Bit 6 - Security capability Bit 7 - Allocate Address | |
| Host->Node | Network Address request Msg Type = 0x0040 | <target short address: uint16_t> <extended address:uint64_t> <request type: uint8_t> <start index: uint8_t> Request Type: 0 = Single Request 1 = Extended Request | Status Network Address response |
| Node->Host | Network Address response Msg Type = 0x8040 | <Sequence number: uint8_t> <status: uint8_t> <IEEE address: uint64_t> <short address: uint16_t> <number of associated devices: uint8_t> <start index: uint8_t> <device list – data each entry is uint16_t> | |
| Host->Node | IEEE Address request Msg Type = 0x0041 | <target short address: uint16_t> <short address: uint16_t> <request type: uint8_t> <start index: uint8_t> Request Type: 0 = Single 1 = Extended | Status IEEE Address response |

| | | | |
|------------|--|--|--------------------------------------|
| Node->Host | IEEE Address response Msg Type = 0x8041 | <Sequence number: uint8_t> <status: uint8_t> <IEEE address: uint64_t> <short address: uint16_t> <number of associated devices: uint8_t> <start index: uint8_t> <device list – data each entry is uint16_t> | |
| Host->Node | Node Descriptor request Msg Type = 0x0042 | <target short address: uint16_t> | Status Node Descriptor response |
| Node->Host | Node Descriptor response Msg Type = 0x8042 | <Sequence number: uint8_t> <Status uint8_t> <network address: uint16_t> <manufacturer code: uint16_t> <max Rx Size: uint16_t> <max Tx Size: uint16_t> <server mask: uint16_t> <descriptor capability: uint8_t> <mac flags: uint8_t> <max buffer size: uint8_t > <bit fields: uint16_t> Bitfields: Logical type (bits 0-2 0 - Coordinator 1 - Router 2 - End Device) Complex descriptor available (bit 3) User descriptor available (bit 4) Reserved (bit 5-7) APS flags (bit 8-10 – currently 0) Frequency band(11-15 set to 3 (2.4Ghz)) Server mask bits: 0 - Primary trust center 1 - Back up trust center 2 - Primary binding cache 3 - Backup binding cache 4 - Primary discovery cache 5 - Backup discovery cache 6 - Network manager 7 to15 - Reserved MAC capability Bit 0 - Alternate PAN Coordinator Bit 1 - Device Type Bit 2 - Power source Bit 3 - Receiver On when Idle Bit 4-5 - Reserved Bit 6 - Security capability Bit 7 - Allocate Address Descriptor capability: 0 - extended Active endpoint list available 1 - Extended simple descriptor list available 2 to 7 - Reserved | |
| Host->Node | Simple Descriptor request Msg Type = 0x0043 | <target short address: uint16_t> <endpoint: uint8_t> | Status Simple Descriptor response |

| | | | |
|------------|--|---|---|
| Node->Host | Simple Descriptor response Msg Type= 0x8043 | <Sequence number: uint8_t> <status: uint8_t> <nwkAddress: uint16_t> <length: uint8_t> <endpoint: uint8_t> <profile: uint16_t> <device id: uint16_t> <bit fields: uint8_t > <InClusterCount: uint8_t > <In cluster list: data each entry is uint16_t> <OutClusterCount: uint8_t> <Out cluster list: data each entry is uint16_t> Bit fields: Device version: 4 bits (bits 0-4) Reserved: 4 bits (bits 4-7) | |
| Host->Node | Power Descriptor request Msg Type = 0x0044 | <target short address: uint16_t> | Status Power Descriptor response |
| Node->Host | Power Descriptor response Msg Type= 0x8044 | <Sequence number: uint8_t> <status : uint8_t> <bit field : uint16_t> Bit fields 0 to 3: current power mode 4 to 7: available power source 8 to 11: current power source 12 to 15: current power source level | |
| Host->Node | Active Endpoint request Msg Type = 0x0045 | <target short address: uint16_t> | Status Active Endpoint response |
| Node->Host | Active Endpoint response Msg Type = 0x8045 | <Sequence number: uint8_t> <status: uint8_t> <Address: uint16_t> <endpoint count: uint8_t> <active endpoint list: each data element of the type uint8_t > | |
| Host->Node | Match Descriptor request Msg Type = 0x0046 | <target short address: uint16_t> <profile id: uint16_t> <number of input clusters: uint8_t> <input cluster list:data: each entry is uint16_t > <number of output clusters: uint8_t> <output cluster list:data: each entry is uint16_t> | Status Match Descriptor response |
| Node->Host | Match Descriptor response Msg Type = 0x8046 | <Sequence number: uint8_t> <status: uint8_t> <network address: uint16_t> <length of list: uint8_t> <match list: data each entry is uint8_t> | |
| Host->Node | Remove Device Msg Type = 0x0026 | <target short address: uint16_t> <extended address: uint64_t> | Status Leave indication |
| Host->Node | User Descriptor Set Msg Type = 0x002B | < target short address: uint16_t> < Address of interest: uint16_t> < string length: uint8_t> <data: uint8_t stream > | Status User descriptor notify response |
| Host->Node | User Descriptor Request Msg Type = 0x002C | < target short address: uint16_t> < Address of interest: uint16_t> | Status User Descriptor response |
| Node->Host | User Descriptor Response Msg Type = 0x802C | <Sequence number: uint8_t> <status: uint8_t> <network address of interest: uint16_t> <length: uint8_t> <data: uint8_t stream> | |

| | | | |
|------------|--|---|--|
| Node->Host | User Descriptor Notify Msg Type = 0x802B | <Sequence number: uint8_t> <status: uint8_t> <Network address of interest: uint16_t> | |
| Host->Node | Complex Descriptor request Msg Type = 0x0034 | < target short address: uint16_t> < Address of interest: uint16_t> | Status Complex Descriptor Response |
| Node->Host | Complex Descriptor response | <Sequence number: uint8_t> <status: uint8_t> <Network address of interest: uint16_t> <Length: uint8_t> <xml tag: uint8_t> <field count: uint8_t> <field values: uint8_t stream> | |
| Host->Node | Management Leave request Msg Type = 0x0047 | <target short address: uint16_t> <extended address: uint64_t> <Rejoin: uint8_t> <Remove Children: uint8_t> Rejoin, 0 = Do not rejoin 1 = Rejoin Remove Children 0 = Leave, removing children 1 = Leave, do not remove children | Status Management Leave response Leave indication |
| Node->Host | Management Leave response Msg Type = 0x8047 | <Sequence number: uint8_t> <status: uint8_t> | |
| Node->Host | Leave indication Msg Type = 0x8048 | <extended address: uint64_t> <rejoin status: uint8_t> | |
| Host->Node | Permit Joining request Msg Type = 0x0049 | <target short address: uint16_t> <interval: uint8_t> <TCsignificance: uint8_t> Target address: May be address of gateway node or broadcast (0xfffc) Interval: 0 = Disable Joining 1 – 254 = Time in seconds to allow joins 255 = Allow all joins TCsignificance: 0 = No change in authentication 1 = Authentication policy as spec | Status |
| Host->Node | Management Network Update request Msg Type = 0x004A | <target short address: uint16_t> <channel mask: uint32_t> <scan duration: uint8_t> <scan count: uint8_t> <network update ID: uint8_t> <network manager short address: uint16_t> Channel Mask: Mask of channels to scan Scan Duration: 0 – 0xFF Multiple of superframe duration. Scan count: Scan repeats 0 – 5 Network Update ID: 0 – 0xFF Transaction ID for scan | Status Management Network Update response |

| | | | |
|------------|--|--|--|
| Node->Host | Management Network Update response Msg Type = 0x804A | <Sequence number: uint8_t> <status: uint8_t> <total transmission: uint16_t> <transmission failures: uint16_t> <scanned channels: uint32_t > <scanned channel list count: uint8_t> <channel list: list each element is uint8_t> | |
| Host->Node | System Server Discovery request Msg Type = 0x004B | <target short address: uint16_t> <Server mask: uint16_t> Bitmask according to spec. | Status System Server Discovery response |
| Node->Host | System Server Discovery response Msg Type = 0x804B | <Sequence number: uint8_t> <status: uint8_t> <Server mask: uint16_t> Bitmask according to spec. | |
| Host->Node | Management LQI request Msg Type = 0x004E | <Target Address : uint16_t> <Start Index : uint8_t> | Status Management LQI response |

B.1.2. Entire Profile

| Message Direction | Message Description | Message Format | Expected Response |
|-------------------|--|---|--------------------------------------|
| Node->Host | Management LQI response Msg Type=0x804E | <Sequence number: uint8_t> <status: uint8_t> <Neighbour Table Entries : uint8_t> <Neighbour Table List Count : uint8_t> <Start Index : uint8_t> <List of Entries elements described below :> Note: If Neighbour Table list count is 0, there are no elements in the list. NWK Address : uint16_t Extended PAN ID : uint64_t IEEE Address : uint64_t Depth : uint_t Link Quality : uint8_t Bit map of attributes Described below: uint8_t bit 0-1 Device Type (0-Coordinator 1-Router 2-End Device) bit 2-3 Permit Join status (1- On 0-Off) bit 4-5 Relationship (0-Parent 1-Child 2-Sibling) bit 6-7 Rx On When Idle status (1-On 0-Off) | |
| Host->Node | Read Attribute request Msg Type = 0x0100 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <Cluster id: uint16_t> <direction: uint8_t> <manufacturer specific: uint8_t> <manufacturer id: uint16_t> <number of attributes: uint8_t> <attributes list: data list of uint16_t each> Direction: 0 - from server to client 1 - from client to server Manufacturer specific : 0 – No 1 – Yes | Status Read Attribute response |
| Host->Node | Write Attribute request Msg Type = 0x0110 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <Cluster id: uint16_t> <direction: uint8_t> <manufacturer specific: uint8_t> <manufacturer id: uint16_t> <number of attributes: uint8_t> <attributes list: data list of uint16_t each> Direction: 0 - from server to client 1 - from client to server | Data Indication Msg Type = 0x8002 |

| | | | |
|------------|--|---|--|
| | | Manufacturer specific : 1 – Yes 0 – No | |
| Host->Node | Attribute Discovery request Msg Type = 0x0140 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <Cluster id: uint16_t> <Attribute id : uint16_t> <direction: uint8_t> <manufacturer specific: uint8_t> <manufacturer id: uint16_t> <Max number of identifiers: uint8_t> Direction: 0 - from server to client 1 - from client to server Manufacturer specific : 1 – Yes 0 – No | Status Attribute Discovery response |
| Node->Host | Attribute Discovery response Msg Type = 0x8140 | <complete: uint8_t> <attribute type: uint8_t> <attribute id: uint16_t> Complete: 0 – more attributes to follow 1 – this was the last attribute | |
| Host->Node | Enable Permissions Controlled Joins Msg Type = 0x0027 | <Enable/Disable : uint8_t> 1 – Enable 2 – Disable | Status |
| Host->Node | Authenticate Device Msg Type = 0x0028 | <IEEE address ; uint64_t> <Key : 16 elements byte each> | Status Authenticate response |
| Node->Host | Authenticate response Msg Type = 0x8028 | <IEEE address of the Gateway: uint64_t> <Encrypted Key : uint8_t 16 elements> <MIC : uint8_t 4 elements> <IEEE address of the initiating node : uint64_t> <Active Key Sequence number : uint8_t> <Channel : uint8_t> <Short PAN Id : uint16_t> <Extended PAN ID : uint64_t> | |
| Host->Node | Configure Reporting request Msg Type = 0x0120 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <Cluster id: uint16_t> <direction: uint8_t> <manufacturer specific: uint8_t> <manufacturer id: uint16_t> <number of attributes: uint8_t> <attributes list: data list of uint16_t each> Attribute direction : uint8_t Attribute type : uint8_t Attribute id : uint16_t Min interval : uint16_t Max interval : uint16_t Timeout : uint16_t Change : uint8_t | Status Configure Reporting response |
| Node->Host | Configure Reporting response Msg Type = 0x8120 | <Sequence number: uint8_t> <Src address : uint16_t> <Endpoint: uint8_t> <Cluster id: uint16_t> <Status: uint8_t> | |

| | | | |
|------------|--|---|---|
| Node->Host | Read individual Attribute Response Msg Type = 0x8100 | <Sequence number: uint8_t> <Src address : uint16_t> <Endpoint: uint8_t> <Cluster id: uint16_t> <Attribute Enum: uint16_t> <Attribute status: uint8_t> <Attribute data type: uint8_t> <Size Of the attributes in bytes: uint16_t> <Data byte list : stream of uint8_t> | |
| Node->Host | Write Attribute Response Msg Type = 0x8110 | <Sequence number: uint8_t> <Src address : uint16_t> <Endpoint: uint8_t> <Cluster id: uint16_t> <Attribute Enum: uint16_t> <Attribute status: uint8_t> <Attribute data type: uint8_t> <Size Of the attributes in bytes: uint16_t> <Data byte list : stream of uint8_t> | |
| Node->Host | Report Individual Attribute response Msg Type = 0x8102 | <Sequence number: uint8_t> <Src address : uint16_t> <Endpoint: uint8_t> <Cluster id: uint16_t> <Attribute Enum: uint16_t> <Attribute status: uint8_t> <Attribute data type: uint8_t> <Size Of the attributes in bytes: uint16_t> <Data byte list : stream of uint8_t> | |
| Node->Host | Default response Msg Type = 0x8101 | <Sequence number: uint8_t> <endpoint: uint8_t> <Cluster id: uint16_t> <Command Id: uint8_t> <Status code: uint8_t> | |
| Host->Node | Out of Band Commissioning Data Request Msg Type = 0x0029 | <Address of interest : uint64_t> <Key : 16 elements byte each> | Status Out of Band Commissioning Data Response |
| Node->Host | Out of Band Commissioning Data Response Msg Type = 0x8029 | <Device Extended Address: uint64_t> <Key : 16 elements byte each> <MIC : uint32_t> <Host Extended Address : uint64_t> <Active Key Sequence Number : uint8_t> <Channel : uint8_t> <PAN ID : uint16_t> <Extended PAN ID : uint64_t> <Short Address : uint16_t> <Device ID : uint16_t> <Status: uint8_t> | |

B.1.3. Group Cluster Commands

| Message Direction | Message Description | Message Format | Expected Response |
|-------------------|--|---|------------------------------|
| Host->Node | Add Group Msg Type = 0x0060 Command ID = 0x00 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <group address: uint16_t> | Status Add Group response |
| Node->Host | Add Group response Msg Type = 0x8060 Command ID = 0x00 | <Sequence number: uint8_t> <endpoint: uint8_t> <Cluster id: uint16_t> | Status |

| | | | |
|------------|--|--|---|
| | | <status: uint8_t> <Group id: uint16_t> | |
| Host->Node | View Group Msg Type = 0x0061 Command ID = 0x01 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <group address: uint16_t> | Status View Group response |
| Node->Host | View Group response Message Type = 0x8061 Command ID = 0x01 | <Sequence number: uint8_t> <endpoint: uint8_t> <Cluster id: uint16_t> <status: uint8_t> <Group id :uint16_t> | |
| Host->Node | Get Group Membership Msg Type = 0x0062 Command ID = 0x02 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <group count: uint8_t> <group list:data> | Status Get Group Membership response |
| Node->Host | Get Group Membership response Msg Type = 0x8062 Command ID = 0x02 | <Sequence number: uint8_t> <endpoint: uint8_t> <Cluster id: uint16_t> <capacity: uint8_t> <Group count: uint8_t> <List of Group id: list each data item uint16_t> | |
| Host->Node | Remove Group Msg Type = 0x0063 Command ID = 0x03 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <group address: uint16_t> | Status Remove Group response |
| Node->Host | Remove Group response Msg Type = 0x8063 Command ID = 0x03 | <Sequence number: uint8_t> <endpoint: uint8_t> <Cluster id: uint16_t> <status: uint8_t> <Group id: uint16_t> | Status |
| Host->Node | Remove All Groups Msg Type = 0x0064 Command ID = 0x04 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> | Status |
| Host->Node | Add Group if identify Msg Type = 0x0065 Command ID = 0x05 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <group address: uint16_t> | Status |

B.1.4. Identify Cluster Commands

| Message Direction | Message Description | Message Format | Expected Response |
|-------------------|-------------------------------------|---|-------------------|
| Host->Node | Identify Send Msg Type = 0x0070 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <time: uint16_t> Time: Seconds | Status |
| Host->Node | Identify Query Msg Type = 0x0071 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> | Status |

B.1.5. Level Cluster Commands

| Message Direction | Message Description | Message Format | Expected Response |
|-------------------|---|--|-------------------|
| Host->Node | Move to Level Msg Type = 0x0080 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <onoff: uint8_t> <mode: uint8_t> <rate: uint8_t> | Status |
| Host->Node | Move to level with/without on/off Msg Type = 0x0081 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <onoff : uint8_t> <Level: uint8_t > <Transition Time: uint16_t> | Status |
| Host->Node | Move Step Msg Type = 0x0082 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <onoff: uint8_t> <step mode: uint8_t > <step size: uint8_t> <Transition Time: uint16_t> | Status |
| Host->Node | Move Stop Move Msg Type = 0x0083 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> | Status |
| Host->Node | Move Stop with On Off Msg Type = 0x0084 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> | Status |

B.1.6. On/Off Cluster Commands

| Message Direction | Message Description | Message Format | Expected Response |
|-------------------|--|--|-------------------|
| Host->Node | On / Off with effects Send Msg Type = 0x0094 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <effect ID: uint8_t> <effect gradient: uint8_t> | Status |
| Host->Node | On/Off with no effects Msg Type = 0x0092 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <command ID: uint8_t> Command Id 0 - Off 1 - On 2 - Toggle | Status |

| | | | |
|------------|--|--|--------|
| Host->Node | On / Off Timed Send Msg Type = 0x0093 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <onoff: uint8_t> <on time: uint16_t> <off time: uint16_t> On / Off: 0 = Off 1 = On Time: Seconds | Status |
|------------|--|--|--------|

B.1.7. Scenes Cluster Commands

| Message Direction | Message Description | Message Format | Expected Response |
|-------------------|--|---|---------------------------------|
| Host->Node | View Scene Msg Type = 0x00A0 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <group ID: uint16_t> <scene ID: uint8_t> | Status View Scene response |
| Node->Host | View Scene response Msg Type = 0x80A0 | <sequence number: uint8_t> <endpoint : uint8_t> <cluster id: uint16_t> <status: uint8_t> <group ID: uint16_t> <scene ID: uint8_t> <transition time: uint16_t> <scene name length: uint8_t> <scene name max length: uint8_t> <scene name data: data each element is uint8_t> <extensions length: uint16_t> <extensions max length: uint16_t> <extensions data: data each element is uint8_t> | |
| Host->Node | Add Scene Msg Type = 0x00A1 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <group ID: uint16_t> <scene ID: uint8_t> <transition time: uint16_t> <scene name length: uint8_t> <scene name max length: uint8_t> <scene name data: data each element is uint8_t> | Status Add Scene response |
| Node->Host | Add Scene response Msg Type = 0x80A1 | <sequence number: uint8_t> <endpoint : uint8_t> <cluster id: uint16_t> <status: uint8_t> <group ID: uint16_t> <scene ID: uint8_t> | |
| Host->Node | Remove Scene Msg Type = 0x00A2 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <group ID: uint16_t> <scene ID: uint8_t> | Status Remove Scene response |
| Node->Host | Remove Scene response Msg Type = 0x80A2 | <sequence number: uint8_t> <endpoint : uint8_t> <cluster id: uint16_t> <status: uint8_t> <group ID: uint16_t> <scene ID: uint8_t> | |
| Host->Node | Remove all scenes Msg Type = 0x00A3 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <group ID: uint16_t> | Status Data indication |
| Node->Host | Remove All Scene response Msg Type = 0x80A3 | <sequence number: uint8_t> <endpoint : uint8_t> <cluster id: uint16_t> <status: uint8_t> <group ID: uint16_t> | |

| | | | |
|------------|---|---|---------------------------|
| Host->Node | Store Scene Msg Type = 0x00A4 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <group ID: uint16_t> <scene ID: uint8_t> | Status Data indication |
| Node->Host | Store Scene response Msg Type = 0x80A4 | <sequence number: uint8_t> <endpoint : uint8_t> <cluster id: uint16_t> <status: uint8_t> <group ID: uint16_t> <scene ID: uint8_t> | |
| Host->Node | Recall Scene Msg Type = 0x00A5 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <group ID: uint16_t> <scene ID: uint8_t> | Status Data indication |
| Host->Node | Scene Membership request Msg Type = 0x00A6 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <group ID: uint16_t> | Status Data indication |
| Node->Host | Scene Membership response Msg Type = 0x80A6 | <sequence number: uint8_t> <endpoint : uint8_t> <cluster id: uint16_t> <status: uint8_t> <capacity: uint8_t> <group ID: uint16_t> <scene count: uint8_t> <scene list: data each element uint8_t> | Status Data indication |

B.1.8. Colour Cluster Commands

| Message Direction | Message Description | Message Format | Expected Response |
|-------------------|---|---|---------------------------|
| Host->Node | Move to Hue Msg Type = 0x00B0 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <hue: uint8_t> <direction: uint8_t> <transition time: uint16_t> | Status Data indication |
| Host->Node | Move Hue Msg Type = 0x00B1 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <mode: uint8_t> <rate: uint8_t> | Status Data indication |
| Host->Node | Step Hue Msg Type = 0x00B2 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <mode: uint8_t> <step size: uint8_t> <transition time: uint8_t> | Status Data indication |
| Host->Node | Move to saturation Msg Type = 0x00B3 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <saturation: uint8_t> <transition time: uint16_t> | Status Data indication |
| Host->Node | Move saturation Msg Type = 0x00B4 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <mode: uint8_t> <rate: uint8_t> | Status Data indication |
| Host->Node | Step saturation Msg Type = 0x00B5 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <mode: uint8_t> <step size: uint8_t> <transition time: uint8_t> | Status Data indication |
| Host->Node | Move to hue and saturation Msg Type = 0x00B6 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <hue: uint8_t> <saturation: uint8_t> <transition time: uint16_t> | Status Data indication |
| Host->Node | Move to colour Msg Type = 0x00B7 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <colour X: uint16_t> <colour Y: uint16_t> <transition time: uint16_t> | Status Data indication |

| | | | |
|------------|----------------------------------|--|---------------------------|
| Host->Node | Move Colour Msg Type = 0x00B8 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <colour X: int16_t> <colour Y: int16_t> | Status Data indication |
| Host->Node | Step Colour Msg Type = 0x00B9 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <step X: int16_t> <step Y: int16_t> <transition time: uint16_t > | Status Data indication |

B.2. ZLO/ZLL-specific Commands

B.2.1. Touchlink Commands

| Message Direction | Message Description | Message Format | Expected Response |
|-------------------|---|--|-------------------|
| Host->Node | Initiate Touchlink Msg Type = 0x00D0 | No Payload | Status |
| Host->Node | Touch link factory reset target Msg Type= 0x00D2 | No Payload | Status |
| Node->Host | Touchlink Status Msg Type = 0x00D1 | <status: uint8_t> <joined node short address: uint16_t> Status 0 = Success 1 = Failure | |

B.2.2. Identify Cluster Commands

| Message Direction | Message Description | Message Format | Expected Response |
|-------------------|--|---|---------------------------|
| Host->Node | Identify Trigger Effect Msg Type = 0x00E0 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <effect ID: uint8_t> <effect gradient: uint8_t > | Status Data indication |

B.2.3. On/Off Cluster Commands

| Message Direction | Message Description | Message Format | Expected Response |
|-------------------|--|---|---------------------------|
| Host->Node | On / Off with Effects Msg Type = 0x0092 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <effect ID: uint8_t> <effect gradient: uint8_t> | Status Data indication |
| Host->Node | On / Off Timed Msg Type = 0x0093 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <onoff: uint8_t> <on time: uint8_t> <off time: uint8_t> | Status Data indication |

B.2.4. Scenes Cluster Commands

| Message Direction | Message Description | Message Format | Expected Response |
|-------------------|---|--|---------------------------|
| Host->Node | Add Enhanced Scene Msg Type = 0x00A7 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <group ID: uint16_t> <scene ID: uint8_t> <transition time: uint16_t> <scene name: string> <length: uint16_t> <max length: uint16_t> <data: data> | Status Data indication |
| Host->Node | View Enhanced Host->Node Scene Msg Type = 0x00A8 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <group ID: uint16_t> <scene ID: uint8_t> | Status Data indication |
| Host->Node | Copy Scene Msg Type = 0x00A9 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <mode: uint8_t> <from group ID: uint16_t> <from scene ID: uint8_t> <to group ID: uint16_t> <to scene ID: uint8_t> | Status Data indication |

B.2.5. Colour Cluster Commands

| Message Direction | Message Description | Message Format | Expected Response |
|-------------------|--|---|---------------------------|
| Host->Node | Enhanced Move to Hue Msg Type = 0x00BA | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <direction: uint8_t> <Enhanced Hue: uint16_t> <transition time: uint16_t> | Status Data indication |
| Host->Node | Enhanced Move Hue Msg Type = 0x00BB | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <mode: uint8_t> <rate: uint8_t> | Status Data indication |
| Host->Node | Enhanced Step Hue Msg Type = 0x00BC | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <mode: uint8_t> <step size: uint8_t> <transition time: uint8_t> | Status Data indication |
| Host->Node | Enhanced Move to hue and saturation Msg Type = 0x00BD | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <enhanced hue: uint32_t> <saturation: uint32_t> <transition time: uint8_t> | Status Data indication |
| Host->Node | Colour Loop Set Msg Type = 0x00BE | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <update flags: uint8_t> <action: uint8_t> <direction: uint8_t> <time: uint8_t> <start hue: uint32_t> | Status Data indication |
| Host->Node | Stop Move Step Msg Type = 0x00BF | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> | Status Data indication |
| Host->Node | Move to colour temperature Msg Type = 0x00C0 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <colour temperature: uint16_t> <transition time: uint16_t> | Status Data indication |
| Host->Node | Move colour temperature Msg Type = 0x00C1 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <mode: uint8_t> <rate: uint16_t> <minimum temperature: uint16_t> <maximum temperature: uint16_t> <options mask: uint8_t> <options override: uint8_t> | Status Data indication |

| | | | |
|------------|--|---|---------------------------|
| Host->Node | Step colour temperature Msg Type = 0x00C2 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <mode: uint8_t> <step size: uint16_t> <transition time: uint16_t> <minimum temperature: uint16_t> <maximum temperature: uint16_t> | Status Data indication |
|------------|--|---|---------------------------|

B.3. ZHA-specific Commands

B.3.1. Door Lock Cluster Commands

| Message Direction | Message Description | Message Format | Expected Response |
|-------------------|---|--|---------------------------|
| Host->Node | Lock / Unlock Door Msg Type = 0x00F0 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <lock/unlock: uint8_t> 0 = Lock 1 = Unlock | Status Data indication |

B.3.2 IAS Cluster Commands

| Message Direction | Message Description | Message Format | Expected Response |
|-------------------|--|---|-------------------|
| Host->Node | IAS Zone enroll response Msg Type = 0x0400 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <Enroll response code: uint8_t> <Zone id : uint8_t> | Status |
| Node->Host | Zone status change notification Msg Type = 0x8401 | <sequence number: uint8_t> <endpoint : uint8_t> <cluster id: uint16_t> <src address mode: uint8_t> <src address: uint64_t or uint16_t based on address mode> <zone status: uint16_t> <extended status: uint8_t> <zone id : uint8_t> <delay: data each element uint16_t> | |

B.4. Exporting Persistent Data to Host

The ZigBee Control Bridge node by default uses the internal EEPROM to hold persisted data. This is about 4Kbytes on a JN5169 device and can restrict network size. To overcome this it is possible to export the data persistence to the host device. This requires a binary with this feature turned “ON”.

The host needs to provide message handshaking sequence to achieve this. How the host actually stores the persisted data is beyond the scope of the document.

| Message Direction | Message Description | Message Format | Expected Response |
|-------------------|--|---|---|
| Node->Host | Host Persistent Data manager available Request Msg Type = 0x0300 | Node enquires about the availability of the Host PDM. | Host persistent Data manager available response |
| Host->Node | Host persistent Data manager available response Msg Type = 0x8300 | The Host must send this as the first message to allow the Node to continue operation. | |
| Node->Host | Load Record Request Msg Type = 0x0201 | <Record Id : uint16_t> | Load Record response |
| Host->Node | Load Record response Msg Type = 0x8201 | <status: uint8_t> <Record Id: uint16_t> <total size: uint32_t> <total number of blocks: uint32_t> <current block: uint32_t> <block size: uint32_t> <data: variable list each item is uint8_t> status: 0- no record found 1- Record recovered | Status |
| Node->Host | Save Record request Msg Type = 0x0200 | <Record Id: uint16_t> <total size: uint32_t> <total number of blocks: uint32_t> <current block: uint32_t> <block size: uint32_t> <data: variable list, each item is uint8_t> | Save Record response |
| Host->Node | Save Record response Msg Type = 0x8200 | <Record Id: uint16_t> <total size: uint32_t> <total number of blocks: uint32_t> <current block: uint32_t> <block size: uint32_t> | |
| Node->Host | Delete all records Msg Type = 0x0202 | | |

B.5. Extended Utilities

The ZigBee Control Bridge also has some extra commands that are sent or received which provide extra debug or features.

| Message Direction | Message Description | Message Format | Expected Response |
|-------------------|---|---|-------------------|
| Host->Node | Raw APS Data Request Msg Type = 0x0530 | <address mode: uint8_t> <target short address: uint16_t> <source endpoint: uint8_t> <destination endpoint: uint8_t> <profile ID: uint16_t> <cluster ID: uint16_t> <security mode: uint8_t> <radius: uint8_t> <data length: uint8_t> <data: auint8_t> | Status |
| Node->Host | Router Discovery Confirm Msg Type = 0x8701 | <status: uint8_t> <nwk status: uint8_t> | |
| Node->Host | APS Data Confirm Fail Msg Type = 0x8702 | <status: uint8_t> <src endpoint: uint8_t> <dst endpoint: uint8_t> <dst address mode: uint8_t> <destination address: uint64_t> <seq number: uint8_t> | |

Appendix C: Use Case Sequences

C.1. Gateway Start-up

The following sequence of messages is exchanged at start-up. In the tables below, the Node refers to the Control Bridge.

| Direction | Message |
|------------|----------------------------------|
| Host->Node | Erase Persistent Data (Optional) |
| Node->Host | Status (If Erase command issued) |
| Host->Node | Reset |
| Node->Host | Status |
| Node->Host | Node Cluster List (multiple) |
| Node->Host | Node Attribute List (multiple) |
| Node->Host | Node Command ID List (multiple) |
| Host->Node | Get Version |
| Node->Host | Status |
| Node->Host | Version List |
| Host->Node | Set Extended PANID |
| Node->Host | Status |
| Host->Node | Set Channel Mask |
| Node->Host | Status |
| Host->Node | Set Security State & Key |
| Node->Host | Status |
| Host->Node | Set Device Type |
| Node->Host | Status |
| Host->Node | Start Network |
| Node->Host | Status |
| Node->Host | Network Formed / Joined |

C.2. Touchlink Initiated by Another Control Node

| Direction | Message |
|------------|----------------------------------|
| Host->Node | Erase Persistent Data (Optional) |
| Node->Host | Status (If Erase command issued) |
| Host->Node | Reset |
| Node->Host | Status |
| Node->Host | Node Cluster List (multiple) |
| Node->Host | Node Attribute List (multiple) |
| Node->Host | Node Command ID List (multiple) |
| Host->Node | Get Version |
| Node->Host | Status |
| Node->Host | Version List |
| Host->Node | Set Extended PANID |
| Node->Host | Status |
| Host->Node | Set Channel Mask |
| Node->Host | Status |
| Host->Node | Set Security State & Key |
| Node->Host | Status |
| Host->Node | Set Device Type |
| Node->Host | Status |
| Host->Node | Start scan |
| Node->Host | Status |
| Node->Host | Network Joined/Failed |
| Node->Host | Touchlink status |
| Node->Host | Network formed |

C.3. Network Formation and Join Under Control of Host

| Direction | Message |
|------------|----------------------------------|
| Host->Node | Erase Persistent Data (Optional) |
| Node->Host | Status (If Erase command issued) |
| Host->Node | Reset |
| Node->Host | Status |
| Node->Host | Node Cluster List (multiple) |
| Node->Host | Node Attribute List (multiple) |
| Node->Host | Node Command ID List (multiple) |
| Host->Node | Get Version |
| Node->Host | Status |
| Node->Host | Version List |
| Host->Node | Set Extended PANID |
| Node->Host | Status |
| Host->Node | Set Channel Mask |
| Node->Host | Status |
| Host->Node | Set Security State & Key |
| Node->Host | Status |
| Host->Node | Set Device Type |
| Node->Host | Status |
| Host->Node | Start scan |
| Node->Host | Status |
| Node->Host | Network Joined/Failed |
| Host->Node | Start form |
| Node->Host | Network formed |

C.4. Touchlink Initiated by Host

| Direction | Message |
|------------|---|
| Host->Node | Erase Persistent Data (Optional) |
| Node->Host | Status (If Erase command issued) |
| Host->Node | Reset |
| Node->Host | Status |
| Node->Host | Node Cluster List (multiple) |
| Node->Host | Node Attribute List (multiple) |
| Node->Host | Node Command ID List (multiple) |
| Host->Node | Get Version |
| Node->Host | Status |
| Node->Host | Version List |
| Host->Node | Set Extended PANID |
| Node->Host | Status |
| Host->Node | Set Channel Mask (Set Primary channels 11,15,20,25) |
| Node->Host | Status |
| Host->Node | Set Security State & Key |
| Node->Host | Status |
| Host->Node | Set Device Type |
| Node->Host | Status |
| Host->Node | Start scan |
| Node->Host | Status |
| Node->Host | Network Joined/Failed |
| Host->Node | Initiate Touchlink |
| Node->Host | Touchlink status |
| Node->Host | Network formed |

C.5. Warm Restart

| Direction | Message |
|------------|---------------------|
| Node->Host | Warm restart status |

C.6. Join Notification - Device Joining Network Formed by Gateway

| Direction | Message |
|------------|------------------------------|
| Node->Host | New device joined indication |
| Host->Node | Match descriptor request |
| Node->Host | Status |
| Node->Host | Match descriptor response |
| Host->Node | Add Group |
| Node->Host | Status |
| Host->Node | Identify |
| Node->Host | Status |
| Node->Host | Identify response |

C.7. Gateway Joins Existing Network

| Direction | Message |
|------------|--------------------------------------|
| Host->Node | Match descriptor request (Broadcast) |
| Node->Host | Status |
| Node->Host | Match descriptor response |
| Host->Node | Add Group |
| Node->Host | Status |
| Host->Node | Identify |
| Node->Host | Status |
| Node->Host | Identify response |

C.8. Binding Control

No sequence required – issue Bind and Unbind commands and get status back

C.9. Identification

No sequence required – commands and get status back.

For all profiles:

- Identify Send (0x0070)
- Identify Query (0x0071)

For ZLO/ZLL devices:

- Identify Trigger Effect (0x00E0)

C.10. Scene Management

No sequence required – issue commands and get status back.

For all profiles:

- View Scene (0x00A0)
- Add Scene (0x00A1)
- Remove Scene (0x00A2)
- Remove all scenes (0x00A3)
- Store Scene (0x00A4)
- Recall Scene (0x00A5)
- Scene membership request (0x00A6)

For ZLO/ZLL devices:

- Add Enhanced Scene (0x00A7),
- View Enhanced Scene (0x00A8)
- Copy Scene (0x00A9)

C.11. Group Management

No sequence required – issue commands and get status back.

- Add Group (0x0060)
- View Group (0x0061)
- Get Group Membership (0x0062)
- Remove Group (0x0063)
- Remove All Groups (0x0064)
- Add Group if identify (0x0065)

C.12. On/Off Control

| Direction | Message |
|------------|------------------------|
| Host->Node | On / Off Send (0x0090) |
| Node->Host | Status |
| Node->Host | On/Off Indication |

Or

| Direction | Message |
|------------|------------------------------|
| Host->Node | On / Off Timed Send (0x0091) |
| Node->Host | Status |
| Node->Host | On/Off Indication |

C.13. Level Control

No sequence required – issue commands and get status back.

- Move to Level (0x0080)
- Move to level with/without On/Off (0x0081)
- Move Step (0x0082)
- Move Stop Move (0x0083)
- Move Stop with On/Off (0x0084)

C.14. Colour Control

For all profiles:

- Move to Hue (0x00B0)
- Move Hue (0x00B1)
- Step Hue (0x00B2)
- Move to saturation (0x00B3)
- Move saturation (0x00B4)
- Step saturation (0x00B5)
- Move to hue and saturation (0x00B6)
- Move to colour(0x00B7)
- Move Colour (0x00B8)
- Step Colour (0x00B9)

For ZLO/ZLL devices:

- Enhanced Move to Hue (0x00BA)
- Enhanced Move Hue (0x00BB)
- Enhanced Step Hue (0x00BC)
- Enhanced Move to hue and saturation (0x00BD)
- Colour Loop Set (0x00BE)
- Stop Move Step (0x00BF)
- Move to colour temperature (0x00C0)
- Move colour temperature (0x00C1)
- Step colour temperature (0x00C2)

Revision History

| Version | Notes |
|---------|---|
| 1000 | First release |
| 1001 | Updated as part of the ZigBee 3.0 release |
| 1002 | Updated the document to add the changes to the attribute response commands and update to include JN517x descriptions. |
| 1003 | Bugs fixed as detailed in Section 6.4 |
| 1004 | Bugs fixed as detailed in Section 6.4 |

Important Notice

Limited warranty and liability — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. NXP Semiconductors takes no responsibility for the content in this document if provided by an information source outside of NXP Semiconductors.

In no event shall NXP Semiconductors be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Notwithstanding any damages that customer might incur for any reason whatsoever, NXP Semiconductors' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the *Terms and conditions of commercial sale* of NXP Semiconductors.

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors and its suppliers accept no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

Applications — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

Customers are responsible for the design and operation of their applications and products using NXP Semiconductors products, and NXP Semiconductors accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NXP Semiconductors product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NXP Semiconductors does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using NXP Semiconductors products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). NXP does not accept any liability in this respect.

Export control — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from competent authorities.

All trademarks are the property of their respective owners.

NXP Semiconductors

For the contact details of your local NXP office or distributor, refer to:

www.nxp.com